

 TRELINO®

HOW
TO...



Betriebsanleitung
DEUTSCH

Instruction Manual
ENGLISH

Mode d'emploi
FRANCAIS



Instrucciones de uso
ESPANOL



Welcome to the Trelino® family!

We are happy that you have chosen our product. Trelino® is more than just a mobile composting toilet. It's your freedom to go, your "just like at home" feeling on the road, your conscious decision for sustainability and your personal statement against chemical toilets.

Make every place your favorite place and explore the world!



Your scope of delivery



Body
with lid



Separator with integrated
or separate toilet seat




Urine canister, lid
with spill protection and closed lid



Solids bucket
with lid



Recycled
bags

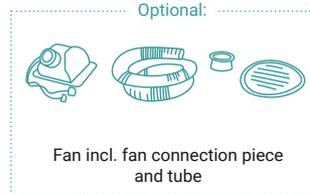

Product details

Product details of each individual Trelino®, dimensions and material information can be found on our website: www.trelino.com/pages/compare-our-trelinos

Instructions for using your Trelino®

Assembly

Our composting toilets can be used mobile as well as permanently installed. For mounting, it may be necessary to drill into the material. Please always make sure that the toilet has a firm stand, is adequately secured when is adequately secured and cannot fall over.



First steps

The Trelino® composting toilet is a toilet for mobile use and is delivered already pre-assembled. Please take care that the bucket and canister are in place after transport and make sure that the spill protection is still fixed in the lid and has not slipped into the urine canister.


Let's go:



01
Place a bag
in the
solids container



02
Place one cup
full of litter
into the bag

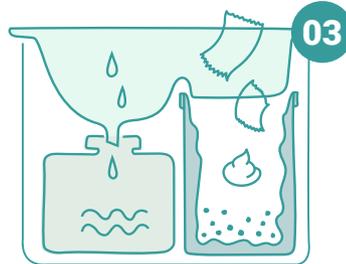

03
Liquids in front,
solids & toilet paper in the back,
dispose of hygiene products separately



04
Place one to two cups
full of litter over the
solids.

Use and care

Open the lid, take out the separator insert and position the solids container and the canister properly in the body. Before first use, line the container with a (recycled, compostable or conventional) garbage bag and optionally place two handfuls of litter inside. Now your Trelino® is ready for use. Dispose of used toilet paper in the solid waste container. After the big business, spread litter over the fresh poop to facilitate the drying process and prevent the formation of unpleasant odors.

Good to know

- For an optimal drying result, we recommend using Dufblocker bedding. Alternatively you can use small animal litter, organic cat litter, coconut bricks, fine bark mulch, hemp mixtures, compressed wood pellets, Terra Preta, humus or soil.
- Check the fill level of the urine canister at regular intervals to prevent overflowing.
- Do not use damp toilet paper! This is counterproductive for the drying process.
- Use the solids container with a trash bag for easy disposal of solids.
- Observe the maximum load of 150 kg.
- Always use the membrane in the lid of the urine canister. It serves as a spill protection.
- The wooden lids of the Trelino® Orgin series are untreated. For maintenance we recommend the use of linseed oil. The lid can also be glazed or painted.

Emptying instructions

When the container is full, remove the bag, close it tightly and dispose of the solids in the household waste. If unbleached toilet paper without dyes and chemical additives is used, (without bags) conventional composting is also possible. Empty the urine canister in a toilet connected to the sewage system. We recommend that you inform yourself about the local disposal regulations.

Cleaning

We recommend vinegar concentrate diluted with water (1 part of vinegar : 7 parts of water) for cleaning the separator, the funnel integrated in it, the solids container and the canister. Rinse the urine canister with the solution after each emptying to prevent the formation of urine scale and unpleasant odors. If deposits or odors have already formed, table vinegar can also be used pure. Make sure to use undiluted vinegar only in the canister and not to let it run through the lid membrane to avoid premature wear. **Cleaning with pure water is not recommended, as this can cause the formation of odors and urine scale.** For simple, natural cleaning of all individual parts of the separation toilet, ph-neutral cleaners and agents with effective microorganisms are also suitable. The separating insert can be wiped with toilet paper after each use of the toilet to prevent urine residues.

Good to know

- Do not use chemical cleaners or sharp-edged objects on the surfaces such as solvents, scouring agents, abrasive sponges, etc..
- Empty the urine canister regularly (ideally every 2 - 3 days).
- If using compostable garbage bags ensure regular emptying. Warm temperatures accelerate the decomposition process.
- Containers and accessories are not suitable for the dishwasher or washing machine.
- **Attention!** Please make sure that the inside of the corpus is adequately ventilated. This is especially true for our products made of wood. Since the natural material reacts sensitively to moisture, we recommend the use of a fan. If you are not going to use your Trelino® for a longer period of time, open the lid to promote air circulation. Persistently humid air can lead to mold in the worst case.



04

Technical data

Trelino® Origin

Size (W/D/H in cm)	34,5/40,0/28,5	33,0/39,0/33,5	33,0/39,0/46,0
Weight (kg)	5,4	5,8	6,8
Urine can (ℓ)	3,5	5	10
Solids tank (ℓ)	6	6,5	10
Maximum load (kg)	150	150	150

Trelino® Evo

Size (W/D/H in cm)	33,0/39,0/29,6	33,0/39,0/36,0	33,0/39,0/43,0
Weight (kg)	3,9	4,3	4,9
Urine can (ℓ)	4,5	5	10
Solids tank (ℓ)	6,5	8	10
Maximum load (kg)	150	150	150

Trelino® Timber

Size (W/D/H in cm)	32,0/40,2/33,1	31,0/39,1/37,5	32,0/39,1/47,5
Weight (kg)	9,2	8,7	9,7
Urine can (ℓ)	4,5	5	10
Solids tank (ℓ)	5,5	5,5	10
Maximum load (kg)	150	150	150

Important hints

- Open and close the lid slowly and carefully to avoid pinching fingers.
- Young children should not use Trelino® unsupervised.
- Do not use Trelino® as a step, ladder, ladder substitute or staircase.
- The membrane of the lid is a wearing part and should be replaced approx. every 3 months.

For more useful tips, everyday hints and assembly instructions, please visit the FAQ section on our website.

Things to know about No.1 & No. 2

Can I dispose of hygiene products in the solids bin?

No. As with conventional toilets, tampons, pads, diapers and the like do not belong in the potty, but separately in the household waste.

After doing No. 1 do I have to sprinkle the used toilet paper after I throw it in the solids bin?

Yes. The paper is damp after use. In order to keep your business in the solid waste container dry, cover the toilet paper with a handful of litter.

Can I use my separation toilet even if I have diarrhea?

Don't worry. Your Trelino® can handle it! If the business turns out to be more liquid, simply use more litter to optimize the drying process. If the feces do turn out to be very liquid, simply change the bag after the session.

How do I find the optimal seating position?

The key here is: the proof of the pudding is in the eating! You can optimize your sitting position by leaning forward and backward and changing the angle of your legs. A little tip: The more upright your posture, the better your aim.



More FAQs are available on our website.



 TRELINO®

Ecoflo Wastewater Management

ecoflo.com.au

info@ecoflo.com.au

1300 138 182

